



INSTRUCTIONS INSTRUCCIONES

Maximum Weight: 70 lbs. (31.8kg)
Poids maximal: 31,8 kg (70 lb)
Peso Máximo: 70 lbs. (31.8 kg)

ENG Remove protective plastic caps from axle ends and dispose of.
ES Quite las tapas protectoras plásticas de los puntos del eje.
FR Retirer les capuchons protecteurs en plastique des extrémités de l'essieu et les jeter.

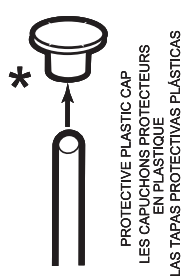

ENG Hammer, Phillips Head screwdriver and small wood block required for assembly. (Not included).
ES Para armarlo se necesita un martillo, un destornillador Phillips y un bloque de madera pequeño. (No incluido).
FR Un marteau, un tournevis cruciforme et une petite cale en bois sont nécessaires pour l'assemblage. (Non inclus)

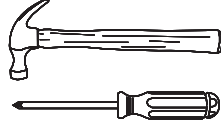

1

L **P** **D** **A**

2

WASHER (N) PEDAL CRANK (I) CUPPED SIDE OF WASHER FACES UP PEDAL (G) WOOD BLOCK

Tap until pedal holds securely to pedal crank

Make sure the "teeth" of the washer are pointing UP in relation to the picture and pointing towards the outside of the pedal.
This is important for the pedals to function properly.

3

C **J**

6

E **A** **K**

7

B **A**

5

A **B** **N**

ENG Do not over tighten screws!
ES No apriete demasiado los tornillos!
FR Ne pas serrer les vis trop fort!

4

F **G**



9

For Model 69052 ONLY, Follow Step 9

A **S** **P**

8

A **C**

ENG See packaging for reference of sticker placement.
ES Vea el empaque para la referencia de ubicación de adhesivos.
FR Voir sur l'emballage pour l'emplacement de l'autocollant.



AGES 3
AND UP